

Alcatel-Lucent 400 DECT Handset

Alcatel-Lucent 300 DECT Handset

Alcatel-Lucent OmniPCX Enterprise Communication Server



Thank you for choosing one of the Alcatel-Lucent DECT Handset line of telephones, and for your confidence in Alcatel-Lucent. Your Alcatel-Lucent DECT Handset telephone offers you the latest design features available from a modern telecommunications system.

To find out the essential features of the **Alcatel-Lucent 300 DECT Handset** or **Alcatel-Lucent 400 DECT Lucent** this guide.

The availability of certain features described in this guide may depend on the version or configuration of your system.
If in doubt, consult the person responsible for your system.

Precautions for use	p.7
----------------------------------	------------

Your telephone	p.10
-----------------------------	-------------

1.

Display and corresponding icons	p.12
--	-------------

1.1 Status icons	p.12
------------------------	------

1.2 Shortcut keys	p.13
-------------------------	------

1.3 Call icons	p.14
----------------------	------

2.

Getting started.	p.15
-------------------------------	-------------

2.1 Installing the battery pack	p.15
---------------------------------------	------

2.2 Charging your telephone battery	p.16
---	------

2.3 Switching on your telephone	p.17
---------------------------------------	------

2.4 Accessing the MENU and navigating	p.17
---	------

3.

Using your telephone	p.18
-----------------------------------	-------------

3.1 Making a call	p.18
-------------------------	------

3.2 To call from your personal directory	p.18
--	------

3.3 Calling your party by name (company directory)	p.18
--	------

3.4 Answering a call	p.19
----------------------------	------

3.5 Redial	p.19
------------------	------

3.6 Requesting automatic callback if internal number is busy	p.19
---	------

3.7 During a call	p.20
-------------------------	------

4.

During a call	p.22
----------------------------	-------------

4.1 Making a second call	p.22
--------------------------------	------

4.2 Answering a second call	p.22
-----------------------------------	------

4.3 Switching between two calls (Broker call)	p.23
---	------

4.4 Transferring a call	p.23
-------------------------------	------

4.5 Three-way conference with internal and/or external parties (conference)	p.24
--	------

4.6 Placing an outside call on hold (parking)	p.24
---	------

5.

Sharing p.26

- 5.1 Answering a night or a general bell p.26
- 5.2 Individual pick-up p.26
- 5.3 Password..... p.27
- 5.4 Sending a written message to an internal party..... p.27
- 5.5 Sending a copy of a voice message..... p.28
- 5.6 Sending a recorded message to a number/a distribution list p.28

6.

Keeping in touch p.29

- 6.1 Immediate forwarding to your voice mailbox..... p.29
- 6.2 Accessing your voice mailbox p.29
- 6.3 Program your associate number p.29
- 6.4 Define an overflow number p.30
- 6.5 Diverting calls to another number (immediate forwarding) p.30
- 6.6 Different types of forwardings..... p.31
- 6.7 Cancelling all forwardings..... p.32
- 6.8 Consulting messages left while you were away..... p.32

7.

Programming your telephone p.33

- 7.1 Initializing your voice mailbox p.33
- 7.2 Modifying your personal code p.33
- 7.3 Adjusting the audio features..... p.34
- 7.4 Activating headset mode p.35
- 7.5 Adjusting your telephone features..... p.36
- 7.6 Adjusting screen brightness p.36
- 7.7 Selecting language..... p.37
- 7.8 Programming your personal directory..... p.37
- 7.9 Modifying a card in the personal directory p.38
- 7.10 Erase a record from the personal directory p.38
- 7.11 Programming an appointment reminder p.39
- 7.12 Identifying the terminal you are on p.39
- 7.13 Locking your telephone p.40

8.	Using the telephone in GAP mode	p.41
8.1	Making a call	p.41
8.2	Answering a call	p.41
8.3	To call from your personal directory	p.41
8.4	Redialing the last number dialed (redial)	p.42
8.5	Sending DTMF signals.	p.42
8.6	Sending a calibrated cut-off	p.42
8.7	Programming your personal directory.	p.42
8.8	Modifying a name or number.	p.43
8.9	Deleting a card	p.43
8.10	Customizing and adjusting your telephone	p.44
8.11	Adjusting your telephone features.	p.45
9.	Registering the telephone.	p.46
9.1	Registering the telephone on a system for the first time.	p.46
9.2	Registering the telephone on other systems.	p.48
10.	Accessories.	p.52
10.1	Chargers	p.52
10.2	Characteristics of the mains power adapter	p.53
10.3	Presentation of the battery pack	p.53
10.4	Headphone / external microphone	p.54
10.5	Cleaning your telephone	p.54
10.6	Transporting and protecting your telephone	p.54
11.	Glossary	p.55
	Declaration of compliance	p.56

Precautions for use

Reception OK (steady)

The DECT features provided by your Alcatel-Lucent system allow user mobility management via DECT cordless telephones.

Radio coverage of the Alcatel-Lucent system is ensured by a network of radio terminals. The coverage area of a radio terminal is called a cell.

- **Mobility:**

A user can make or receive calls in any cell.

- **Radio transfer:**

This feature enables the user to move during a call and go from one cell to another. The transfer takes place automatically and has no effect on the call. In some cases, slight crackling may be audible at the moment of transition.

Use of approved DECT equipment

This DECT telephone is designed to be used with a private automatic branch exchange (PABX) without an Alcatel-Lucent wire.

The CE symbol means that this product is compliant with current Community directives, more especially the following directives:

- | | |
|--------------|-------------------------------|
| ■ 89/336/CEE | Electromagnetic Compatibility |
| ■ 73/23/CEE | (low voltage) |
| ■ 1999/5/CE | (R&TTE) |

Pursuant to directive 1999/5/CE (R&TTE) published in the Official Journal of the European Community of April 7, 1999, these items of equipment use the DECT harmonized frequency spectrum and can be used in all the countries of the European Community, in Switzerland and Norway.



No guarantee is given concerning possible interference affecting DECT equipment, due to other authorised utilisation of the radio frequencies concerned.

Precautions for use









Operating conditions

This terminal and the supporting radio equipment have been designed for use with an Alcatel-Lucent OmniPCX system and have been officially approved for private use between wireless telephones via the associated private exchange. The following conditions must be respected, notably concerning the use of radioelectric frequencies:












- DECT equipment can only be used to establish links between fixed points if these links are temporary and the equivalent isotropically radiated power at the antenna is less than 250 mW.
- The conditions of access to a DECT equipment telepoint network shall be stipulated by contract with the attendant of the authorized telepoint network concerned.
- The power outlet used must be close to the charger/holder and easily accessible, so that it can be used as a way to turn power on or off.
- Switch off the telephone before changing the battery.
- Do not expose your telephone to severe conditions (rain, sea air, dust, etc.).
- Correct operation of your telephone is not guaranteed at temperatures outside the range -10°C to +45°C.
- You must not switch on or use your telephone near gas or inflammable liquids.
- A volume level that is too high can cause irreparable loss of hearing. Adjust the sound volume of your handset to a reasonable level.

Your telephone

Status icons

- | | |
|---|---|
|  Battery charge level: |  Ringer active |
|  Message(s) waiting (flashing) |  Ringer deactivated |
|  Programmed callback time |  Radio reception quality: |
|  Call forwarding activated |  Vibrator active |

Call icons

- | | |
|---|--|
|  | Making a call |
|  | Answering a call |
|  | In conversation |
|  | Call on hold |
|  | Access the directory feature |
|  | Transferring a call |
|  | Switching to DTMF signals |
|  | Setting up a conference |
|  | Place a call on hold |
|  | Parking an external communication (I) |
|  | Additional options (I) |



- Switch the screen on again
- Erase a character
- Return to previous menu
- Delete an entire field (long press)


- **Hang up**
- Return to first screen
- Switch off ringer
- Lock/unlock keypad (long press)

- Company directory
- Customizing your telephone (I) / Telephone ID (I) (long press)

(I) if the system allows this

Microphone

Back-lit screen (in colour for the 400 DECT)

The screen switches off automatically after a few seconds of inactivity. To turn it back on, press the key .

Headset jack
(400 DECT)

Light

- **Green steady:** handset charging
- Green fast flashing: outside the radio field
- Red slow flashing: message present

Alcatel-Lucent 



■ **Adjust audio volume**

■ **Access MENU**

- Confirm
- Display next selection of a list (up, down, left, right)

■ **Lift the receiver**

- Redial (long press)
- Broker call (during consultation call)

■ **Activate/deactivate loudspeaker (400 DECT)**

■ **Activate/Deactivate the vibrating ringer (long press)**

■ **Switch on / off (long press)**

■ Rapid access to ringer adjustment

1 *Display and corresponding icons*

Your telephone display features 1 line of status icons and 3 lines of 16 alphanumeric characters.

1.1 **Status icons**

The status icons are displayed on the welcome screen and indicate the status of the telephone.



Battery charge level



Received messages voice mail and callback request texts and unanswered calls



Programmed callback time



Call forwarding activated



Vibrator active



Ringer active

 


Ringer deactivated




Radio reception quality

You can obtain details on the status icons from the tooltips that appear on the welcome screen when you use the navigator:



1.2

Shortcut keys

All features described here below can be accessed by a long press on specific keys (**OK**: )
It provides access to all the features available on your system.

**Directories:**

manage your personal directory and access the company directory.

**Redial:**

Auto call back

**Forward:**

forward your calls to another number.

**Mailbox:**

consult and send voice and text messages.

**Call pick-up**

answer a call intended for another telephone.

**Appointment:**

program a callback time.

**System lock:**

prohibit outgoing calls and modification of the programming.



Guide: programming, list of functions,...

**Adjustment:**

adjust the basic features of your telephone (preferences)



System selection



Installation



Manager/secretary



Supervision



Choice of language



Ringing setting

1.3

Call icons



Making a call



Answering a call



In conversation



Call on hold



Access the directory feature



Transferring a call



Switching to DTMF signals



Setting up a conference



Additional options (Other call, Park, Record, Forbid Wait, etc.)



 
Call duration and cost

* In the event of a multiple call, the icons are given indices to represent the different parties

2.1

Installing the battery pack

- **Installing the battery pack**

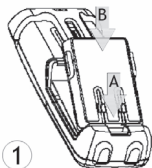

1

 
Position the battery 'connectors' side as shown in the drawing (A).

Terminate the installation of the battery in its compartment by pressing as shown in the drawing (B).



2

Replace the cover.

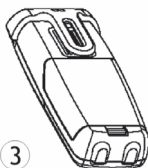


3

- **To remove it**




 1

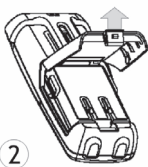

2


 
Lift up the cover.

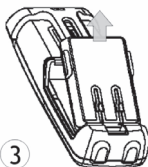

3

Remove the battery from its compartment as shown in the drawing.

  Charging your telephone battery

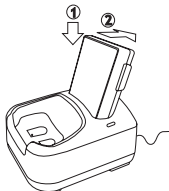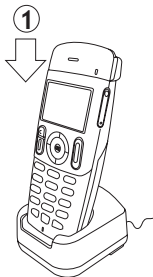

Plug the charger into an appropriate electrical outlet and place the terminal into its charger slot. The telephone LED is green when charging.

'Dual Desktop' charger: position the battery as shown in the drawing:

- 1- place the battery in the cradle,
- 2- press down backwards until it clicks into place

Recharge your telephone battery regularly. The telephone can be on or off when recharging the battery. If the telephone is to remain unused or out of its charger for several weeks, remove the battery and store it separately.



** the battery charge time is 3.5 h.*

The two-colour indicator lamp on the dual charger gives the following indications :

- **Off:** No backup battery.
- **Red:** Backup battery on charge.
- **Green :** Backup battery charged.



Switch off the telephone before changing the battery.

2.3

 
Switching on your telephone



Switch on (long press)



Wait a few seconds (about 3s).



Your telephone is switched on

If the display fails to light up or the battery icon is flashing, recharge the battery.

If the radio reception icon doesn't appear on the telephone display :

- Check that you're in an area covered (if you're not, move close to a radio terminal).
- Check that the telephone is properly installed in the system (consult the PABX manager).



If the display indicates: 'System 1 — Auto install ?', see paragraph 'Registering the telephone' or contact your installation technician.


Switching off your telephone:

Press the **switch on/off** key (long press).

(Switch the station on or off: )

2.4

Accessing the MENU and navigating

All features described here below can be accessed by a long press on specific keys (**OK** : )



Confirm



Accessing the features:



Select the '**Diversion**' feature



You can move horizontally along the various icons within the feature

3.1

 
Making a call



To make an external call, dial the outside line access code (9) before dialing your party's number.


3.2

To call from your personal directory

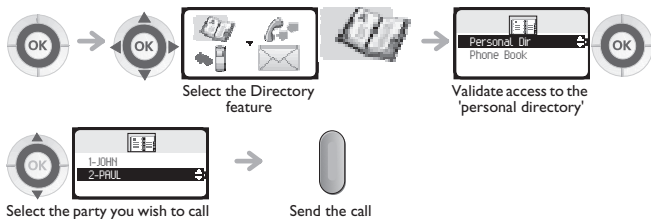

3.3

 Calling your party by name (company directory)

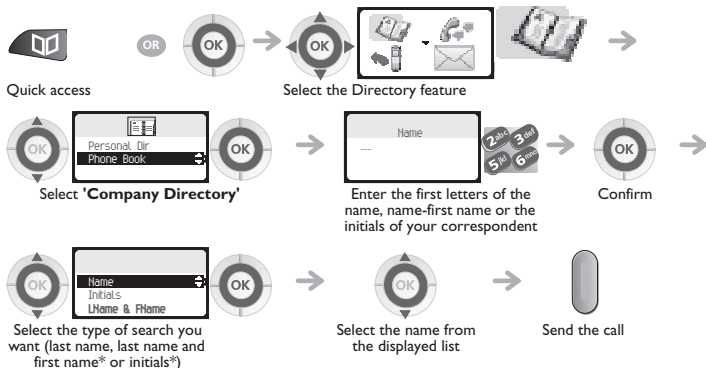

* Name must be entered in format name/space/first name.

3.4

Answering a call



The user can be informed of an incoming call in four ways:



- by the ringer (when active), with different sounds for internal or external call
- by the buzzer (if active)

Disabling the ringer:

Press the hang up key when your telephone rings: it is still possible to answer by pressing the unhook key.

(Hang up:  , Lift the receiver: )

3.5

Redial

- Redialing the last number dialed (redial):



Long press

- Call back on the last 8 number dialed:



3.6

Requesting automatic callback if internal number is busy

The telephone of the internal party you are trying to contact is busy, and you want the person to call you back as soon as they are free.




To cancel the automatic callback request, enter the 'Cancel automatic callback' feature code.

3.7

During a call

During a call and without losing the connection, there are several ways to access the options offered by your system, using:


- the list of icons at the top of the screen
- the list of items at the bottom of the screen

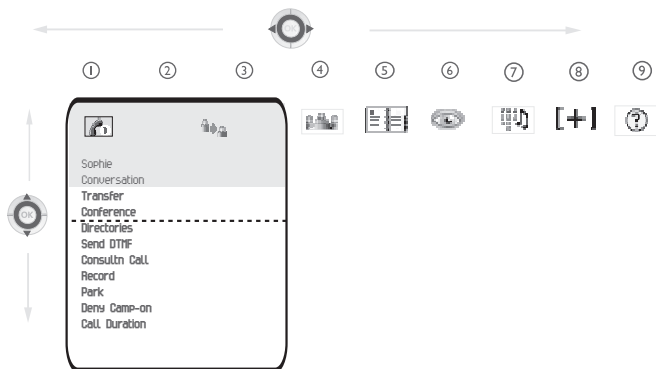 

- ① Call in progress
- ② Slot for second call
(reception of a call: / call waiting:)
- ③ Press to perform the transfer
- ④ Call transfer
- ⑤ Directory
- ⑥ Supervision
- ⑦ Voice frequency
- ⑧ Additional options (Other call, Park, Record, Forbid Wait, etc.)


• Example: sending DTMF signals:

 During a call, you sometimes have to send DTMF signals, for example, for a voice message service, an automatic switchboard or when remotely consulting an answering machine:

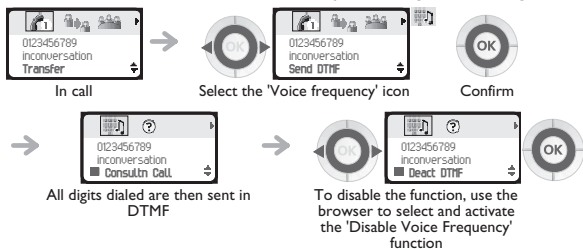


4.1

 Making a second call



 - Press the line key with icon to recover the call on hold




You can also initiate a second call by first validating the 'Other call' option and using the personal directory or the company directory.

4.2

Answering a second call

 You are on call and a party is trying to contact you:




Over 3 seconds, move with the navigate-left-right key to the receiving a second call icon, to see the identity of the second caller (and off-hook if necessary)


4.3

Switching between two calls (Broker call)

 During a call, to recover the party on hold:



 You can establish the identity of the waiting call without taking it by using the navigate-left-right key.



4.4

Transferring a call

To transfer your call to another number:

 


After dialing the destination number, you can transfer the call directly without waiting for your party's reply by validating the 'Transfer' option. You can initiate the transfer by using the icon or the 'Transfer' text. The transfer between two external parties and the transfer by pressing the hang-up key depend on the system configuration.

4.5

Three-way conference with internal and/or external parties (conference)

- During a call, a second call is on hold.

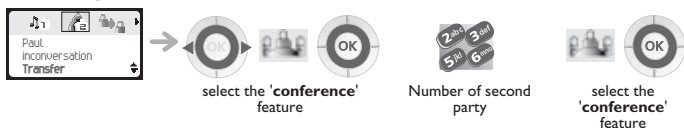

You are in conference mode

- cancel conference and return to first correspondant (if conference is active)



- After the conference, to leave your two parties talking together:



4.6

Placing an outside call on hold (parking)

You can park an outside party in order to take the call on another set.

 


Your party is parked and hears the hold melody.



If you on-hook without entering the number of a call park destination set, the call will be parked on your set.

To recover your parked call:

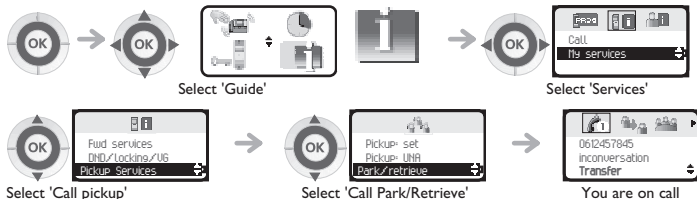


If the parked call is not recovered within a preset time (by default 1 minute 30), it is directed to the attendant.

5.1

Answering a night or a general bell

 
When the attendant is absent, incoming external calls are forwarded to a general bell. You can answer these calls:

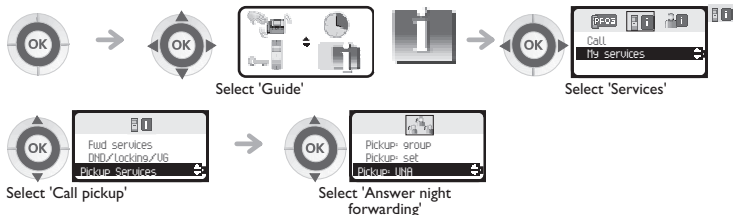

5.2

Individual pick-up

 You hear a telephone ringing in an office where no-one can answer. If authorized, you can answer the call on your own telephone.

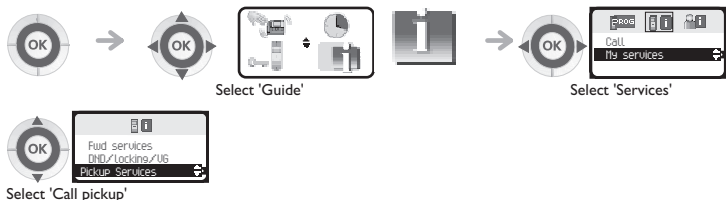

If the telephone ringing is not in your pick-up group:



If the telephone ringing is in your own pick-up group:



The system can be configured to prevent call pick-up on certain telephones.

 
Password

Hunt group call:


Some extensions can be associated to form a group. You can contact any one of them by dialing the group number.



Temporary exit from your hunt group:/Return into your group:

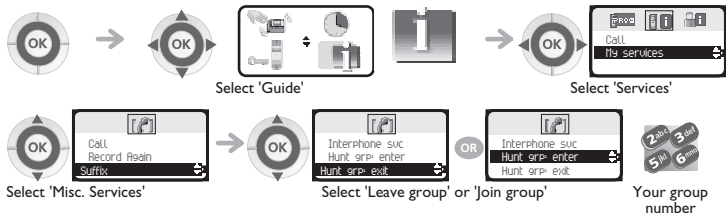

 
Sending a written message to an internal party

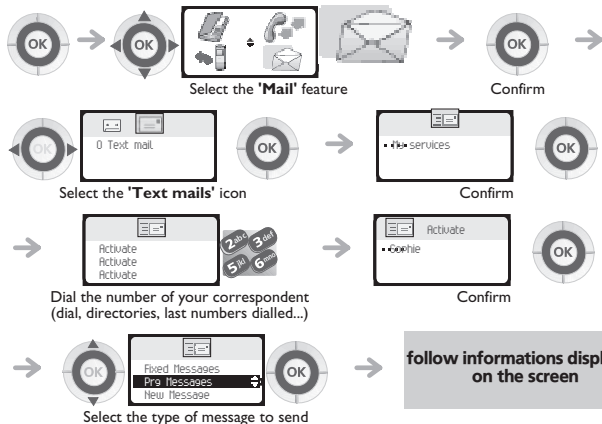

If selected message has to be completed:



When editing a message to be completed you can use the delete key to delete any characters key ined. (delete : ). The browser lets you move the cursor in an input field.

 
5.5

Sending a copy of a voice message



5.6

Sending a recorded message to a number/a distribution list

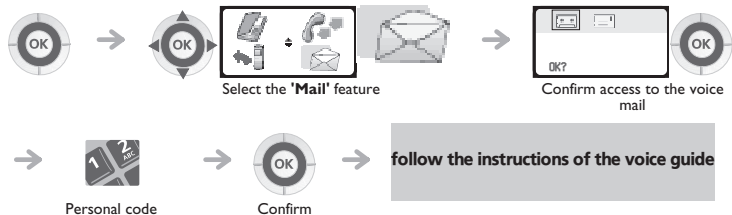

6.1

Immediate forwarding to your voice mailbox

 


6.2

Accessing your voice mailbox

When you have received a message, the voice mailbox icon flashes on the display.


(Message : ) The red LED on your telephone flashes to indicate there is a message.

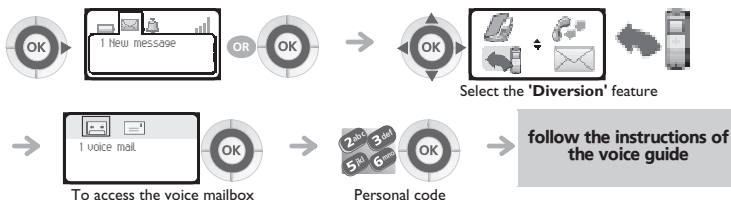

6.3

Program your associate number

 
The associated number can be a phone set number, the voice mail number or the pager number. It can be used as overflow number.

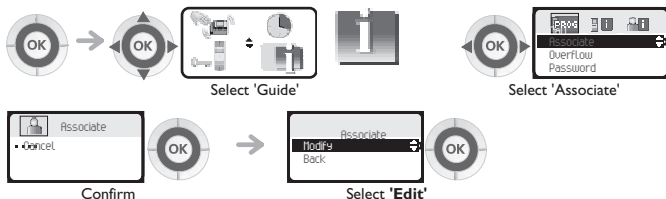




6.4 Define an overflow number

 When your set is not available, outside the coverage area or not working, calls to your set will be automatically forwarded to this number if it has been defined.

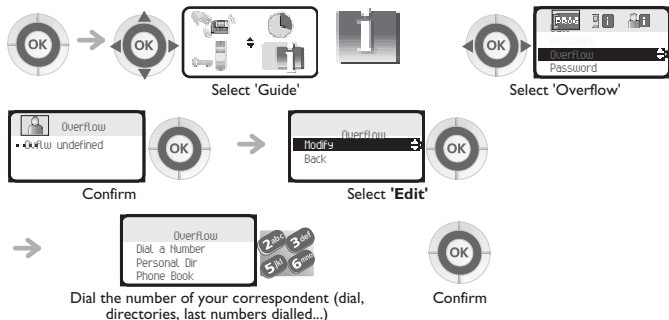

6.5 Diverting calls to another number (immediate forwarding)

 The number can be your home, cell or mobile, voice message, or an internal extension (attendant, etc.).

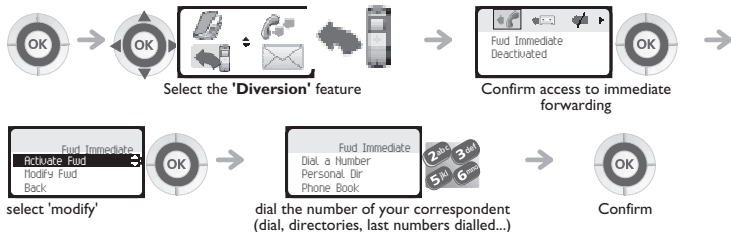

You can continue to make calls while your telephone is forwarded.




General remark concerning forwardings: you can only activate a single forwarding on your telephone. Programming a new forwarding will cancel the previous one.

 
6.6

Different types of forwardings Example of forwarding on busy

• Different types of forwardings

You can initiate different types of forwarding from the **call forward** list.


(call forward list : )



When you are on call, all your calls are forwarded to the number you choose.



 When you are absent, all your calls are forwarded to the number of your choice (delayed forwarding on no answer)




When you are absent or already in communication, all your calls are forwarded to the number of your choice (delayed forwarding on no answer or busy)



Program the forwarding of a set from another set (immediate remote forwarding)

 • Example of forwarding on busy:

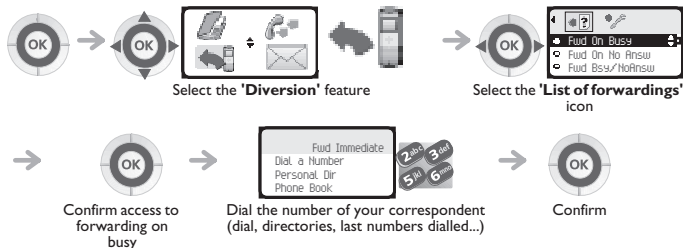

6.7

Cancelling all forwardings

Select the '**Diversion**' featureSelect the '**Diversion**
cancellation' icon

Confirm

6.8

Consulting messages left while you were away

When you have received a message, the voice mailbox icon flashes on the display (**Message:**). The red LED on your telephone flashes to indicate there is a message.

Select the '**Mail**' featureSelect the '**Text mails**' icon

Select the desired message



Confirm to read it

Read the message

Confirm access to
'Options'

 
from the options menu, you can erase the message, callback the message sender, answer the message or read the next message

7 Programming your telephone

7.1 Initializing your voice mailbox


You can use the **Message** icon on the welcome screen to initialize your voice mailbox.

(**Message:** )

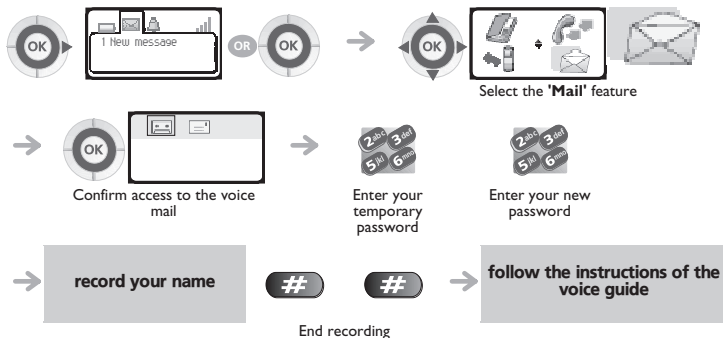

7.2 Modifying your personal code

 Your personal code is used to access your voice mailbox and to lock your telephone.

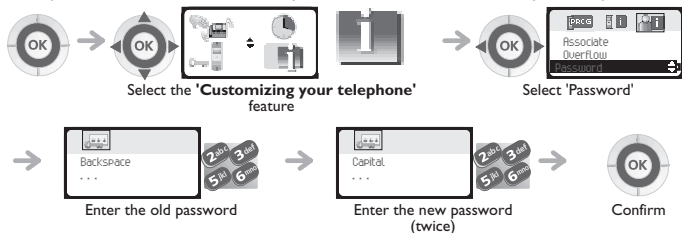

As long as your voice mailbox has not been initialized, password is your extension number or 0000. Each digit of the code is symbolized by an asterisk.

 
7.3

Adjusting the audio features

You can select the ring tone for your telephone (6 choices) and adjust its volume (4 levels).



- **Choose the tune:**



- **Adjusting the ringer volume:**



- **Activate the buzzer or the ringer:**

 


This key can be used to switch rapidly from the ringer to the vibrator and vice-versa.


• Choosing the ringer melody:

You can choose from 5 different melodies for your terminal ringer. (Switch the station on or off

:  , OK : )

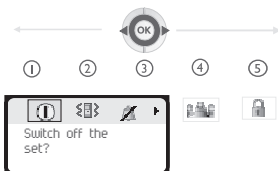


- ① **Switch off the telephone**
- ② **Activate/disable the vibrator**
- ③ **Activate/disable the ringer**
- ④ **Activate/disable meeting mode (progressive ringing)**
- ⑤ **Lock/Unlock keypad**

Press the **OK** key to confirm (OK : )

7.4


Activating headset mode

 This mode allows you to answer calls automatically (without doing anything) and to direct the call to the external headset.

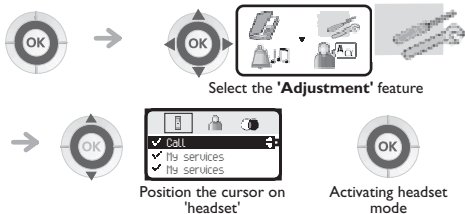

7 Programming your telephone

 
7.5 Adjusting your telephone features

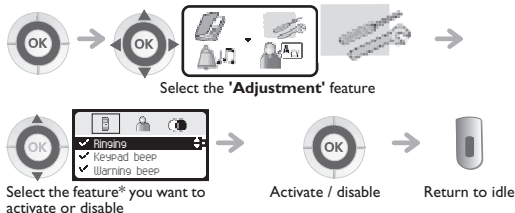

***You can activate or disable the following features:**

<input type="checkbox"/> Lighting	The telephone lights up when you press a key
<input type="checkbox"/> Bell	The telephone rings when a call is received
<input type="checkbox"/> Buzzer	The buzzer goes off when a call is received
<input type="checkbox"/> Keypad beep	The phone beeps each time you press a key
<input type="checkbox"/> Error beep	The phone will beep each time it detects an error
<input type="checkbox"/> Outside area beep	The phone beeps if the radio link can no longer be detected
<input type="checkbox"/> Standby screen	Screen proposed after an idle period
<input type="checkbox"/> Headset	activating or deactivating headset mode

 7.6 Adjusting screen brightness

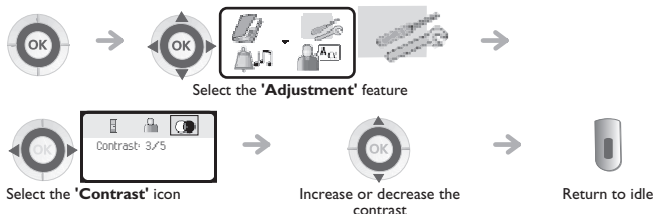

7.7

Selecting language

 


The initial language selection is made automatically by the system.

7.8

Programming your personal directory

Your personal directory may contain up to 10 numbers.

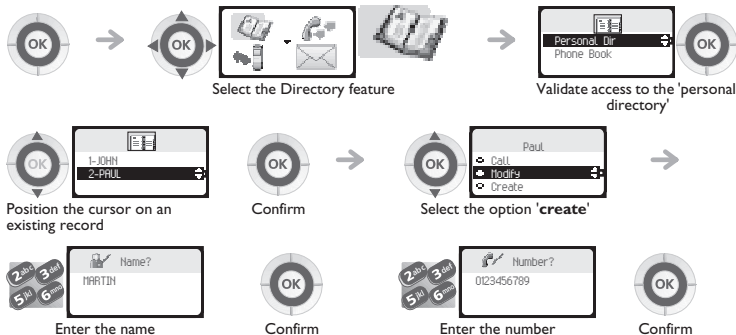


T key in the name: the keys in the keypad include letters that you can display by pressing them successively.

Example: press '8' twice to display the letter 'U'.


7.9

 Modifying a card in the personal directory

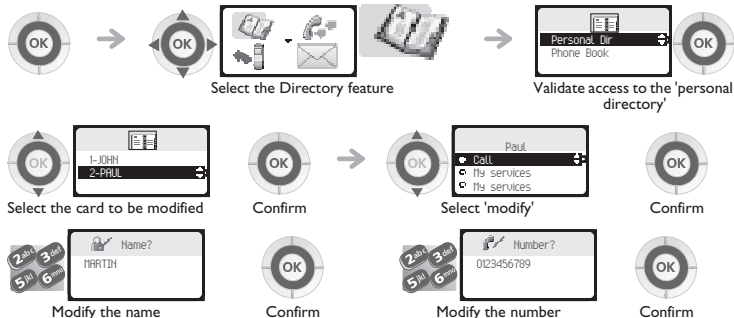


Use the browser to position on the character or digit to modify.

To delete a character, briefly press the delete key.

(delete: ). to erase a field full of characters, hold down the erase key (long press).


7.10

 Erase a record from the personal directory

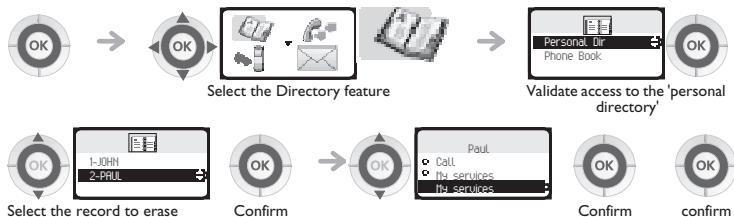

7.11

 Programming an appointment reminder

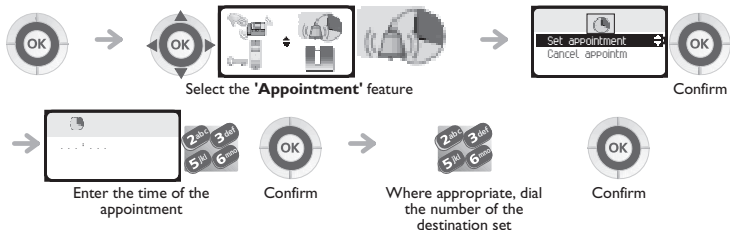

At the programmed time, your telephone rings:

 


press the On-hook key to accept the appointment (Hang up : ).



If you do not validate the answer to the first call-back, a second call-back will be made. After a second call-back with no answer, the call-back request will be cancelled. If your line is forwarded to another set, the appointment reminder will not follow the forwarding

To cancel your appointment callback request:

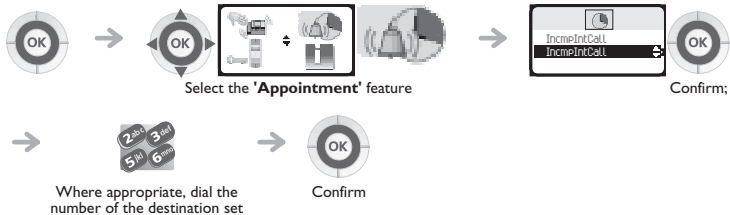

7.12

Identifying the terminal you are on



 
Displays your telephone number.

(long press)


7.13 Locking your telephone

• Locking your terminal:

This service enables you to prohibit outside calls and any programming changes on your telephone:

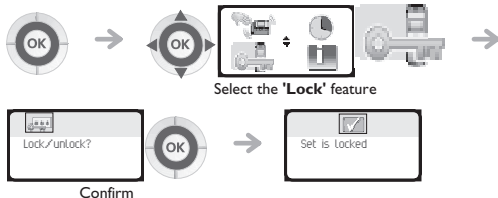

• Unlock your terminal:

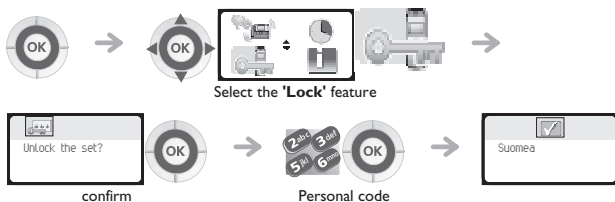 

• Lock/unlock keypad:



Using the telephone in GAP mode

Your telephone complies with the GAP standard and can be used in simplified mode on another DECT/GAP system (other PABX or indoor relay unit).

Unless otherwise specified, the features described below are available on your telephone in combination with the mandatory features provided by your fixed GAP system.

Automatic transfer between radio cells:

This telephone feature enables you to move around between radio relay units, without any break in communications. However, this facility depends on the inherent limitations of the fixed system, notably its ability to manage several radio relays.

Display feature:

 
When a call is made from the telephone, the digits dialed are displayed. When you receive a call, the display indicates the caller's number or name, if this feature is provided by the fixed system.



This utilisation may involve feature restrictions outside the coverage of our guarantee.


8.1

Making a call



8.2

 Answering a call




8.3

To call from your personal directory



8 Using the telephone in GAP mode

8.4 Redialing the last number dialed (redial)

Press the **unhook** key (hold down for a few seconds). (**Lift the receiver** : )

8.5 Sending DTMF signals

During a call, you sometimes have to send DTMF signals, for example, for a voice message service, an automatic switchboard or when remotely consulting an answering machine. To do this:

Press the **star** key (hold down for a few seconds). (**star** : )

8.6 Sending a calibrated cut-off

 
The calibrated cut-off activates features such as transfer to another telephone set.

To make a calibrated cut-off:

Press the **0** key (hold down for a few seconds).

8.7 Programming your personal directory

Your directory can contain up to 12 numbers.

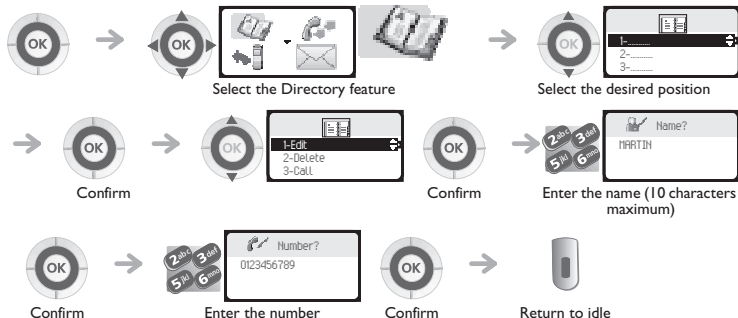


To key in the name : the keys in the numeric keypad include letters that you can display by pressing them successively. Example: press twice in succession on 8 to display the letter 'U'.

To insert a pause in a number, press the 1 (hold down for a few seconds).

To insert a measured break, press 0 (hold down for a few seconds).

8.8

 
Modifying a name or number

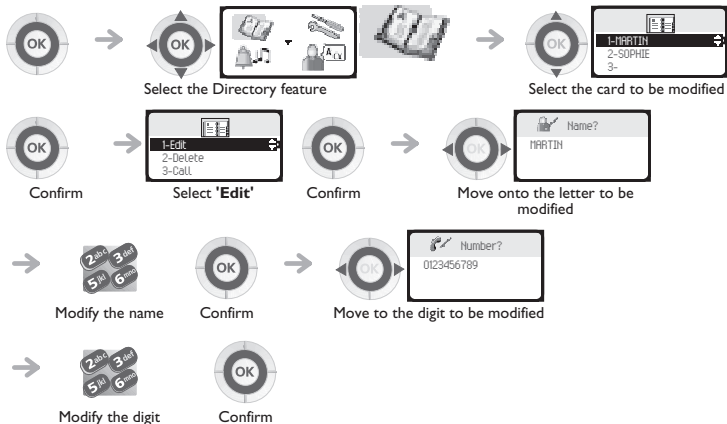

To delete a character, use the delete key. (delete : )

8.9

 
Deleting a card

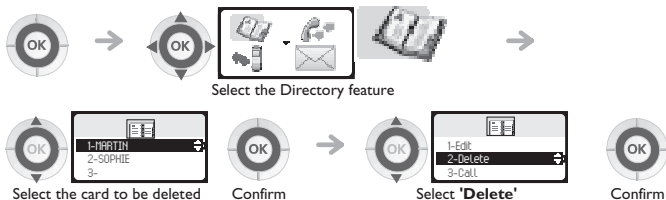


8.10

Customizing and adjusting your telephone

 
Choosing your melody:

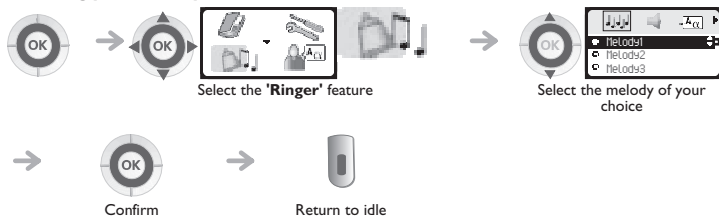


Adjusting the ringer volume:

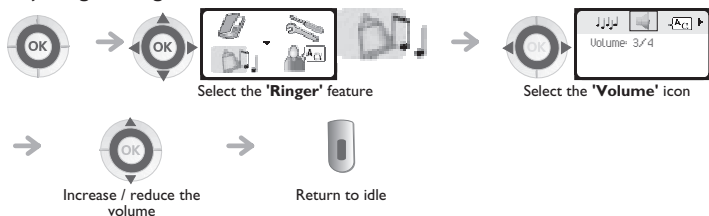 

Selecting language:

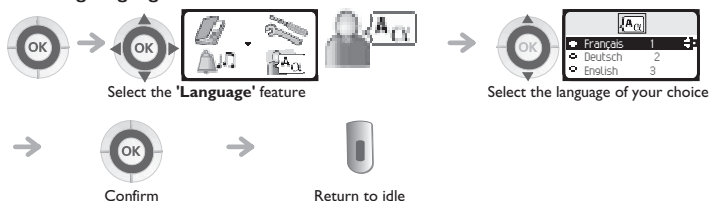 


Adjusting screen contrast:

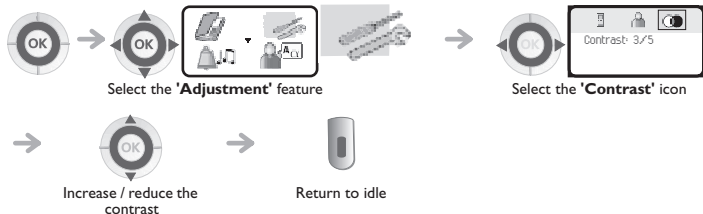 

8.11

 Adjusting your telephone features

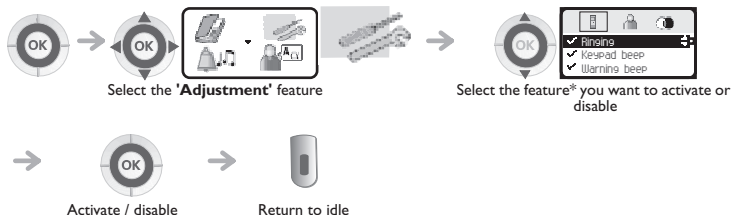

*You can activate or disable the following features:

- | | |
|--|--|
| <input type="checkbox"/> Lighting | The telephone lights up when you press a key |
| <input type="checkbox"/> Bell | The telephone rings when a call is received |
| <input type="checkbox"/> Buzzer | The buzzer goes off when a call is received |
| <input type="checkbox"/> Keypad bleep | You will hear a bleep each time you press a key |
| <input type="checkbox"/> Error bleep | You will hear a bleep each time an error is detected |
| <input type="checkbox"/> Outside area bleep | The phone bleeps when the radio link can no longer be detected |
| <input type="checkbox"/> Standby screen | Screen proposed after an idle period |

9.1

Registering the telephone on a system for the first time

For the mobile telephone to feature, it must be registered on at least one Alcatel-Lucent or GAP system (registration operation).

If when first switched on the display indicates: '**System 1 — Auto install ?**' your telephone has not been registered on any system; consult your installation technician or proceed as follows:

1. Prepare your system for registration (see system installation guide).
2. When the system is ready, the station always displays the starting screen:

 


3. You have two subscription possibilities:

a- If the system does not use an AC code




b- If the system uses an AC (authentication code)

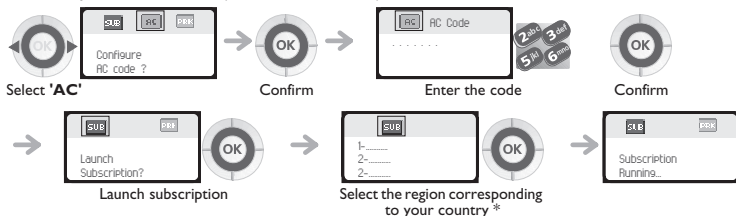

The DECT set can be programmed and can address the 4 specified frequency bands. On installation, the user of a DECT set must declare the set in the appropriate frequency band according to the country in which the user finds himself:



 Europe band: 1880 MHz - 1900 MHz



US/Canada band: 1920 MHz - 1930 MHz



South America band: 1910 MHz - 1930 MHz

 


Asia band: 1900 MHz - 1920 MHz

Before installing your DECT set, please contact your administrator to know which frequency band you need to declare.

The registration operation can last up to 2 minutes.

- If the operation has been done correctly (subscription accepted), the telephone is ready to be used and the **radio reception quality** icon is displayed. (**Radio reception quality:** :)
- If the registration operation has not been successful, the station proposes launching the subscription again.



Utilization of the telephone in GAP mode can lead to featureal limitations for which no claims will be considered under the terms of the warranty.

9.2

Registering the telephone on other systems

 
The telephone can be declared on several systems (maximum of 5).

Note: the input is usually reserved for use with your main Alcatel-Lucent system. You can select the other inputs to register the telephone under another system (Alcatel-Lucent or other system).

To make a new registration, when the telephone has already been registered on one or more systems, proceed as follows:

1. Prepare your system for registration (see the system installation manual or consult your installation manager).


2. When the system is ready:

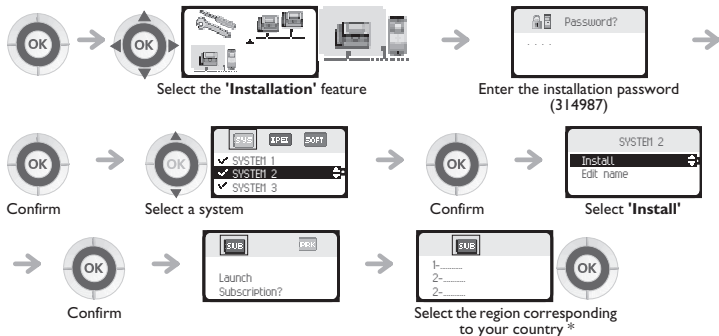

The DECT set can be programmed and can address the 4 specified frequency bands. On installation, the user of a DECT set must declare the set in the appropriate frequency band according to the country in which the user finds himself:



 Europe band: 1880 MHz - 1900 MHz



US/Canada band: 1920 MHz - 1930 MHz



South America band: 1910 MHz - 1930 MHz



Asia band: 1900 MHz - 1920 MHz

Before installing your DECT set, please contact your administrator to know which frequency band you need to declare.

 
3. You have two subscription possibilities:

a- If the system does not use an AC code




Launch subscription

b- If the system uses an AC (authentication code)

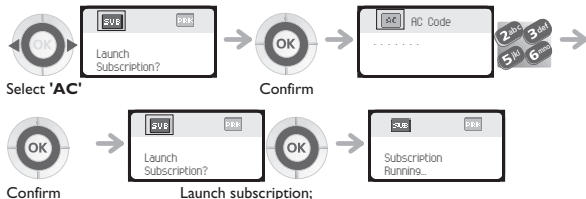

 
- If the registration operation runs correctly (Subscription accepted), the telephone is ready for use, and the radio coverage icon appears.
- If the registration operation has not been successful, the station proposes launching the subscription again.



- Depending on the type of system concerned, registration may require one or more additional operations on the system.

Selecting your telephone system:

 
your telephone can be programmed to feature on 5 different DECT systems (Alcatel-Lucent or GAP).

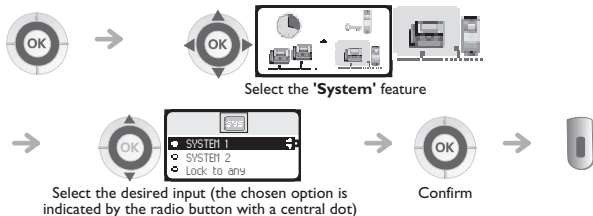


The selection is retained even after switching the telephone on/off. The selection of a specific system (SYSTEM...) forces operation on a specific system. This selection must be changed if one wishes to change system. Selecting 'Lock to any' enables the telephone to connect automatically when it enters a system coverage zone. If the systems programmed in the telephone have common coverage zones, the telephone selects the first system found.

10.1

 
Chargers

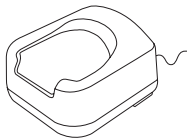**The 'Basic Desktop' charger includes:**

 
1. a telephone support,
2. a mains cable, via an AC/DC adaptor.

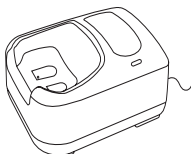**The 'Dual Desktop' charger includes:**

 1. a support with :
 - a place for the telephone,
 - a place for an additional battery,
 - a charge indicator light for the additional battery.
2. a mains cable via a AC/DC adaptor.

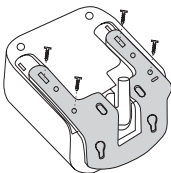• Fixing a charger on a vertical surface

 The metal shielding plate under the chargers can be dismantled, enabling you to fix the charger on a vertical surface (see figure), contact your installer.

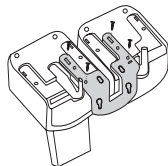• Assembling two chargers

The metal shielding plate under the chargers can be dismantled and may be used to assemble two chargers together (see figure). This assembly can also be fixed on a vertical surface, contact your installer.

10.2

Characteristics of the mains power adapter

- Input: 100/240 V - 50/60 Hz
- Output: 7.5 V - 0.38 A



The power outlet used must be close to the charger/holder and easily accessible, so that it can be used as a way to turn power on or off.

10.3

Presentation of the battery pack

Autonomy of your telephone	300 DECT	400 DECT
On standby in the radio coverage zone	233 hours	233 hours
In continuous call	20,6 hours	19,4 hours

Initial charge:



Place the telephone in the charging holder



Battery icon flashing



On charge (minimum 3 or 5 hours)



Battery is fully charged (steady)



Maximum battery performance is only reached after around 10 charge/discharge cycles.

These batteries contain polluting substances: do not dispose of them in a dustbin - take them to a specialized collection point.

10.4

Headphone / external microphone

The side of the telephone features a headphone / external microphone socket. Contact your retailer to find out the characteristics of the various headphone models.

10.5

Cleaning your telephone

Your telephone does not require any particular servicing. However, it may be cleaned using a soft, damp cloth.



Do not use soap or detergent that would risk altering the colours or damaging the surface of the telephone.

10.6

Transporting and protecting your telephone

To avoid losing your telephone, get into the habit of clipping it onto your belt. Your telephone can also be carried in a protective case.



Various models of carrying case are available. Ask your installation technician for information. It is vital to use the special protective carrying case if your telephone is to be used in an industrial environment (presence of dust, filings, vapours of diverse origins and risk of being dropped). If the telephone is used with a carrying case, the belt clip must be removed.

■ **Broker call:**

Function enabling the user to switch back and forth between several simultaneous calls.

■ **Call transfer:**

Function enabling a call to be transferred to another telephone within the system.

■ **Common directory:**

This directory contains all the speed-dial numbers accessible to the users of the Alcatel-Lucent system.

■ **Conference:**

The conference feature allows the user, in contact with two parties, to set up a three-way conference.

■ **DECT:**

European cordless telephone standard: Digital Enhanced Cordless Telecommunication.

DECT telephone: cordless telephone complying with the DECT standard.

■ **GAP (Generic Access Profile):**

Specific operating mode defined in the European DECT standard. The telephone GAP mode is a basic and simplified form of operation compatible with other DECT GAP systems (other PBX or indoor relay).

■ **Hunting groups:**

Several telephones grouped under one directory number. A call to this number is directed to one of the free telephones within the group.

■ **Intrusion:**

Function allowing intrusion into a call between two parties.

■ **Personal assistant:**

This facility enables the caller to avoid having to leave a message in the voice mailbox and directs him/her to an extension number, an outside number, a mobile or the switchboard.

■ **Parking:**

This feature places an outside call on hold, for subsequent recovery on another "authorised" extension within the system.

■ **Password**

This password controls access to the programming and terminal locking features by the user (default password: 1515).

■ **Personal directory:**

This directory contains the personal numbers of the user of a terminal.

■ **Pick-up group:**

This feature enables you to answer a call ringing on another terminal. Calls can only be picked up within the pick-up group.

■ **Broker call**

During a call, DTMF codes are sometimes required. These codes are used when a user wants to consult a voice server, access a PABX or remotely consult an answering machine.

Declaration of compliance

We, Alcatel-Lucent Enterprise, hereby declare that we assume the **Alcatel-Lucent 300 DECT Handset** and **Alcatel-Lucent 400 DECT Handset** to be compliant with the essential requirements of Directive 1999/5/CE of the European Parliament and Council.

This equipment uses the DECT harmonised frequency spectrum and can be used in all the countries of the European Community, Switzerland and Norway. No guarantee is given concerning possible interference affecting DECT equipment, due to other authorised utilisation of the radio frequencies concerned.

This device has been designed and manufactured not to exceed the SAR (Specific Absorption Rate) radio frequency power transmission limits established by the different countries concerned. The SAR value measured is equal to 0.061 W/kg (the globally accepted maximum limit being 1.6 W/kg). Consumption in standby: 20 mW.

The labels and icons presented in this document are not contractually binding and may be modified without prior warning.

The labels and icons displayed on your phone depend on the system to which you are connected and may differ from those specified in this document.

Any unauthorised modification to the product shall render this declaration of compliance null and void. A copy of the original of this declaration of compliance can be obtained by post from :

Alcatel-Lucent Enterprise - Technical Services - Approvals Manager
1, route du Dr. Albert Schweitzer -
F 67408 Illkirch Cedex - France



Information relative to the environment

This symbol indicates that at the end of its life, this product should be subject to special collection and disposal in member countries of the European Union, as well as in Norway and Switzerland. By ensuring this product is disposed of correctly, you will help to conserve natural resources and help prevent potential negative consequences to the environment and human health which could otherwise be caused by inappropriate disposal of this product. For further details about recycling this product, please contact the supplier who sold you the product.

Alcatel, Lucent, Alcatel-Lucent and the Alcatel-Lucent logo are trademarks of Alcatel-Lucent. All other trademarks are the property of their respective owners.
The information presented is subject to change without notice.
Alcatel-Lucent assumes no responsibility for inaccuracies contained herein.
Copyright © 2007 Alcatel-Lucent. All rights reserved

MU60370USAAed01-E800ed01-2606